

User's Manual


Wireless Headset




1. Package Contents

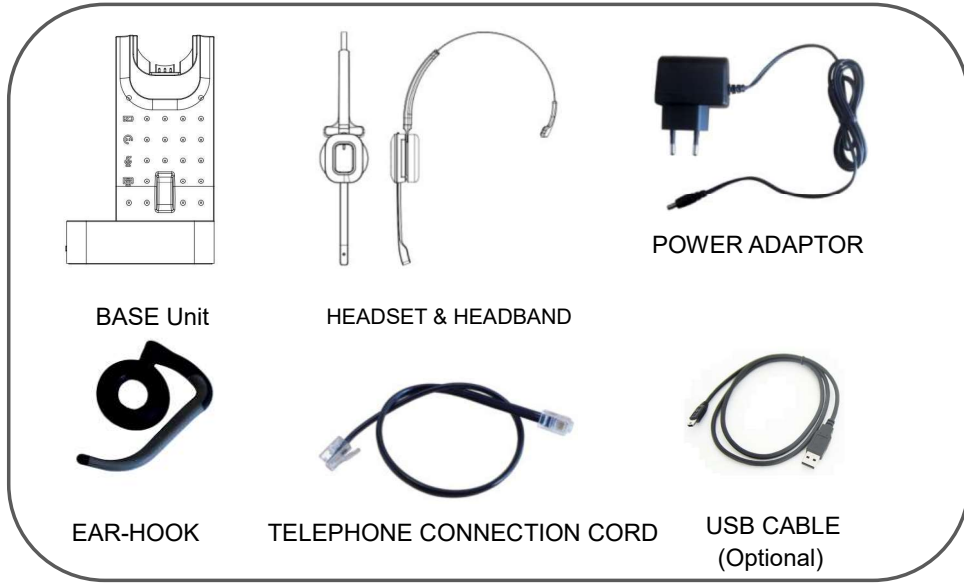


2. Headset

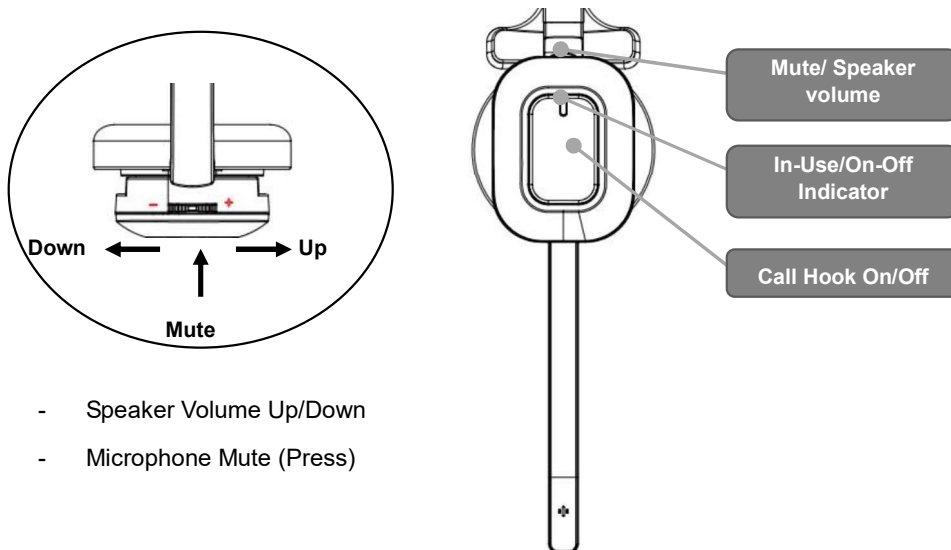


- Fit the headband or ear-hook on the headset
- Adjust the boom arm of your headset so that the microphone is positioned in the direction of your mouth, as close as possible to your mouth.

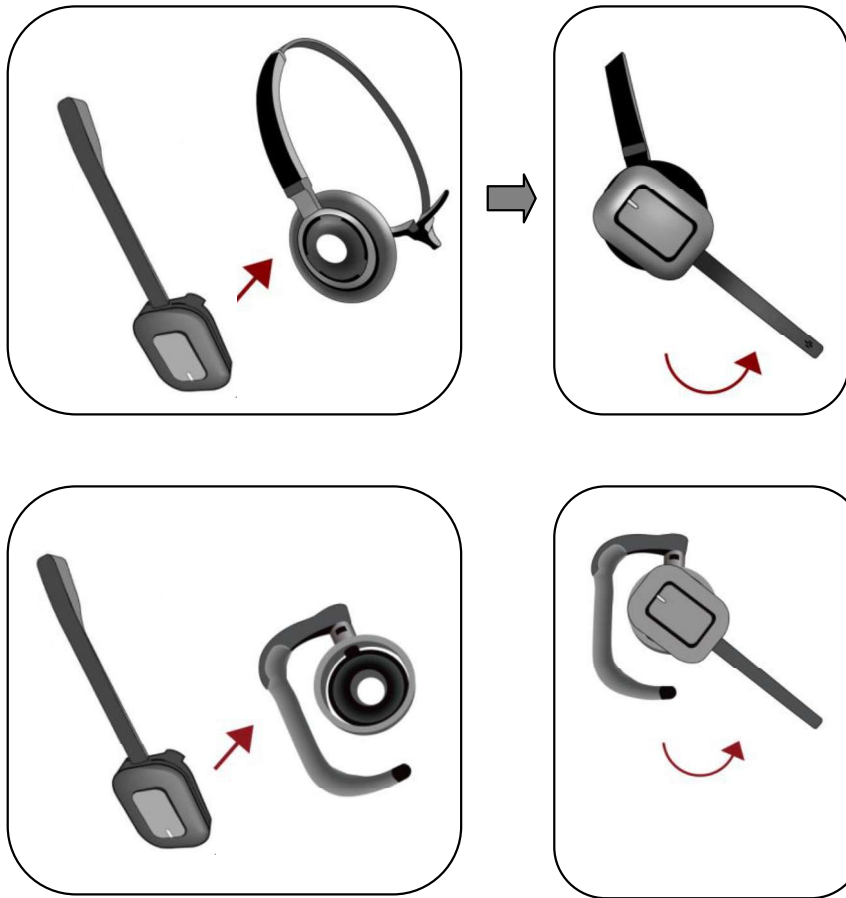

3. Base Unit

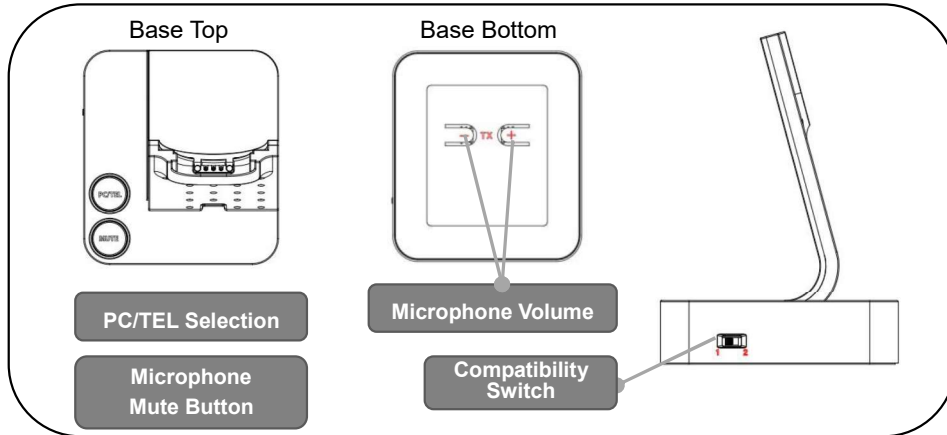


Microphone Volume Switch	When installed, adjust volume level for the best level of microphone volume.
Compatibility Switch	Select '1' or '2' until a dial tone is heard via the telephone connection.
PC/TEL	Only USB version has a this function.

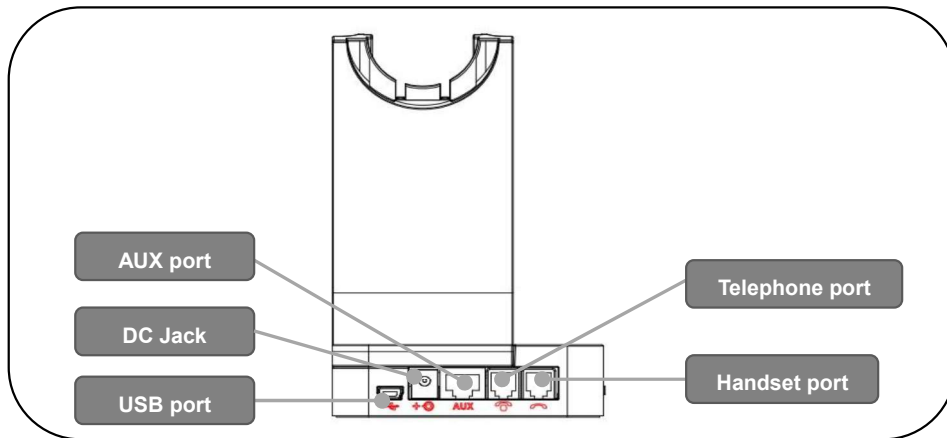

AUX	Connection for Handset LIFTER (optional extra)
Handset port	Plug Handset cord from the phone to Handset port
Telephone port	Connect telephone cord to the headset port or handset port of a telephone / base unit
USB Port	Connect USB cable between PC and base unit.
DC Jack	Connect Power Adapter to DC Jack


4. LED indicator

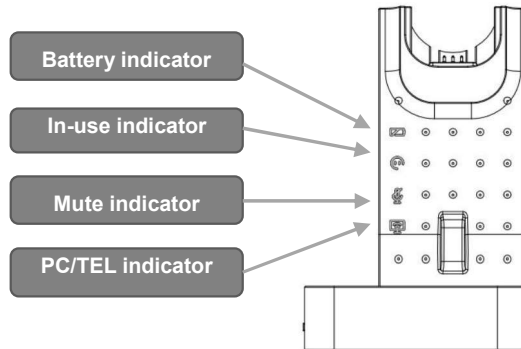

Charging Status	LEDs status
Charging	Battery Indicator : 'Blinking' 3 sec-ON, 1sec-OFF
Full Charged	Battery Indicator : 'ON'
Low Battery	Battery Indicator : 'Blinking' 0.5 sec-ON, 0.5 sec-OFF
Event	LEDs status
Press Microphone mute	Mute indicator : 'ON'
Press PC/TEL selection	PC/TEL Indicator - TEL : 'OFF' PC : 'ON'
Hook Off	In-use indicator : 'ON'


5. Setting up the BASE

Diagram 1 (Desk phone with HEADSET port)

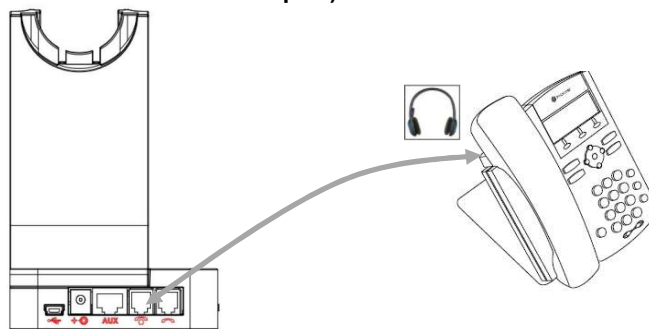

- Plug the supplied telephone cord into the TEL port of the BASE UNIT
- Connect the telephone cord to the HEADSET port of the desk phone

Diagram 2 (Desk phone without HEADSET port)

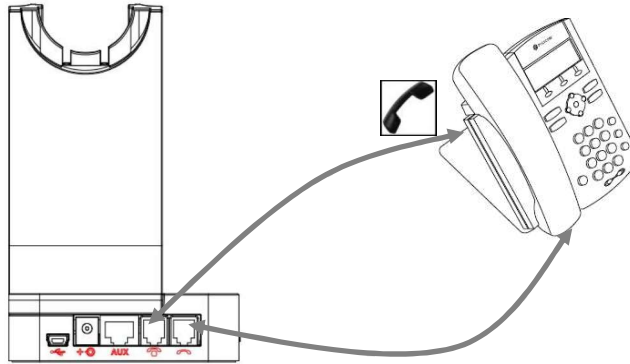

- On the desk phone, unplug the handset cable from the phone
- Plug the handset cable into the HANDSET port on the BASE UNIT
- Plug the telephone cord into the TEL port on the BASE UNIT and plug the other end of the telephone cord into the HADNSET port on the desk phone

(Desk phone with DL-570 LIFTER)

The DL-570 remote handset lifter manually lifts the desk phone handset to make or answer a call.

- Refer to the DL-570 installation guide

(Desk phone with EHS Adapter)

EHS Adapter enables an incoming call to be answered or ended by using the On/Off button on the Headset..

- Refer to the EHS Adapter installation guide

6. Operational Instruction

- Plug the Power Adapter cord on the Base unit. **(Note 1)**
- Press Hook On/Off switch to make a call
- Select compatibility switch '1' or '2' position until you can hear the dial tone
- Adjust speaker and microphone volume
- Press Hook On/Off switch to end a call

Note 1 : Factory default setup : Paired

Pairing process is automatically proceeding when plug the power adapter into the Base Unit. (Make sure that headset is placed on the cradle and should be powered on before power is turned on. If the headset is not placed on the cradle, pairing will be unsuccessful.)

7. Electronic Hook Switch (optional extra)

The unit enables you to answer and end calls remotely by using its built-in electronic hook switch (EHS). EHS of this unit is only compatible with certain telephone systems supporting EHS.

- ★ EHS is only compatible with certain telephone systems. In order to determine which telephones are compatible with the EHS feature, please refer to EHS guide or contact your local distributor. Please also refer to your telephone's user manual for clarification.

8. Trouble Shooting

1. Can not hear a dial tone.

- ☞ Check the TEL/PC button.
TEL Mote: PC/TEL indicator – ‘OFF’
- ☞ Please check the cable connection between Base unit and Phone.
- ☞ Check that the power adapter is plugged in and has power
- ☞ Please check the compatibility switch. Adjust compatibility switch until you can hear the dial tone.

2. Microphone volume (TX) is low / dead.

- ☞ Make sure that the microphone (TX) mute function is deactivated.
- ☞ Check the position of the boom arm and make sure that the microphone is placed as close as possible to your mouth (approx. 2 fingers distance).
- ☞ Adjust the microphone (TX) volume on the bottom of base unit.

3. Buzzing sound on the headset

- ☞ Telephone may not be fully immune to the radio transmission between your headset and base. To overcome this problem, move the base unit to at least 30 cm/12” away from the phone.

4. Headset echoes

- ☞ Adjust the telephone’s volume. If necessary, adjust your microphone volume on the headset to a lower setting.

5. EHS doesn’t work with the telephone

- ☞ Make sure the telephone is compatible with the wireless headset. Refer to the EHS guide.

6. Headset was working, but it has stopped.

- ☞ Headset may need pairing to the base again. Refer to the ‘**Note 1**’ on ‘**Operational Instruction**’
- ☞ Headset battery may be dead. Return the headset to the cradle on the base unit for charging.

WARRANTY CARD

Mr./Mrs./Miss/Co. _____

Telephone No. _____

Address _____

Model No. _____

Brand _____

Serial No. _____

Invoice No. _____

Dealer _____

Date of Purchase _____

Note : THIS WARRANTY CARD WILL BE VOID IF IT IS
NOT MAILED BACK TO OUR COMPANY WITHIN
10 DAYS FROM DATE OF PURCHASE,
WARRANTY CONDITIONS
(PLEASE SEE OVERLEAF)